 
 
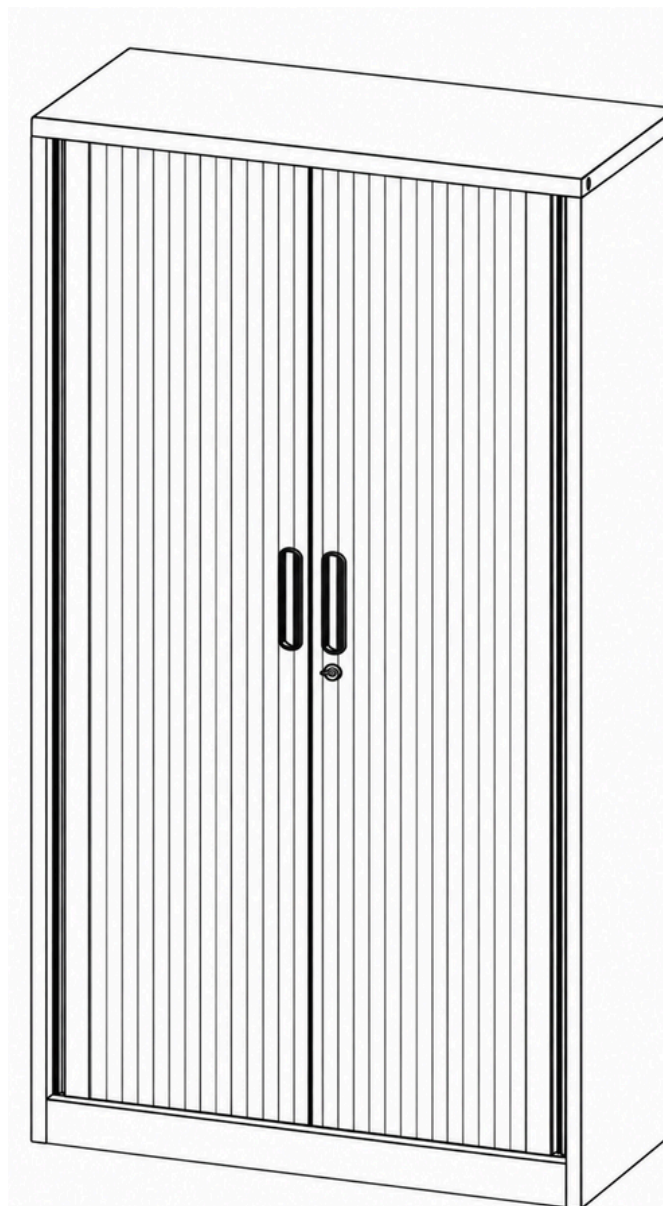 
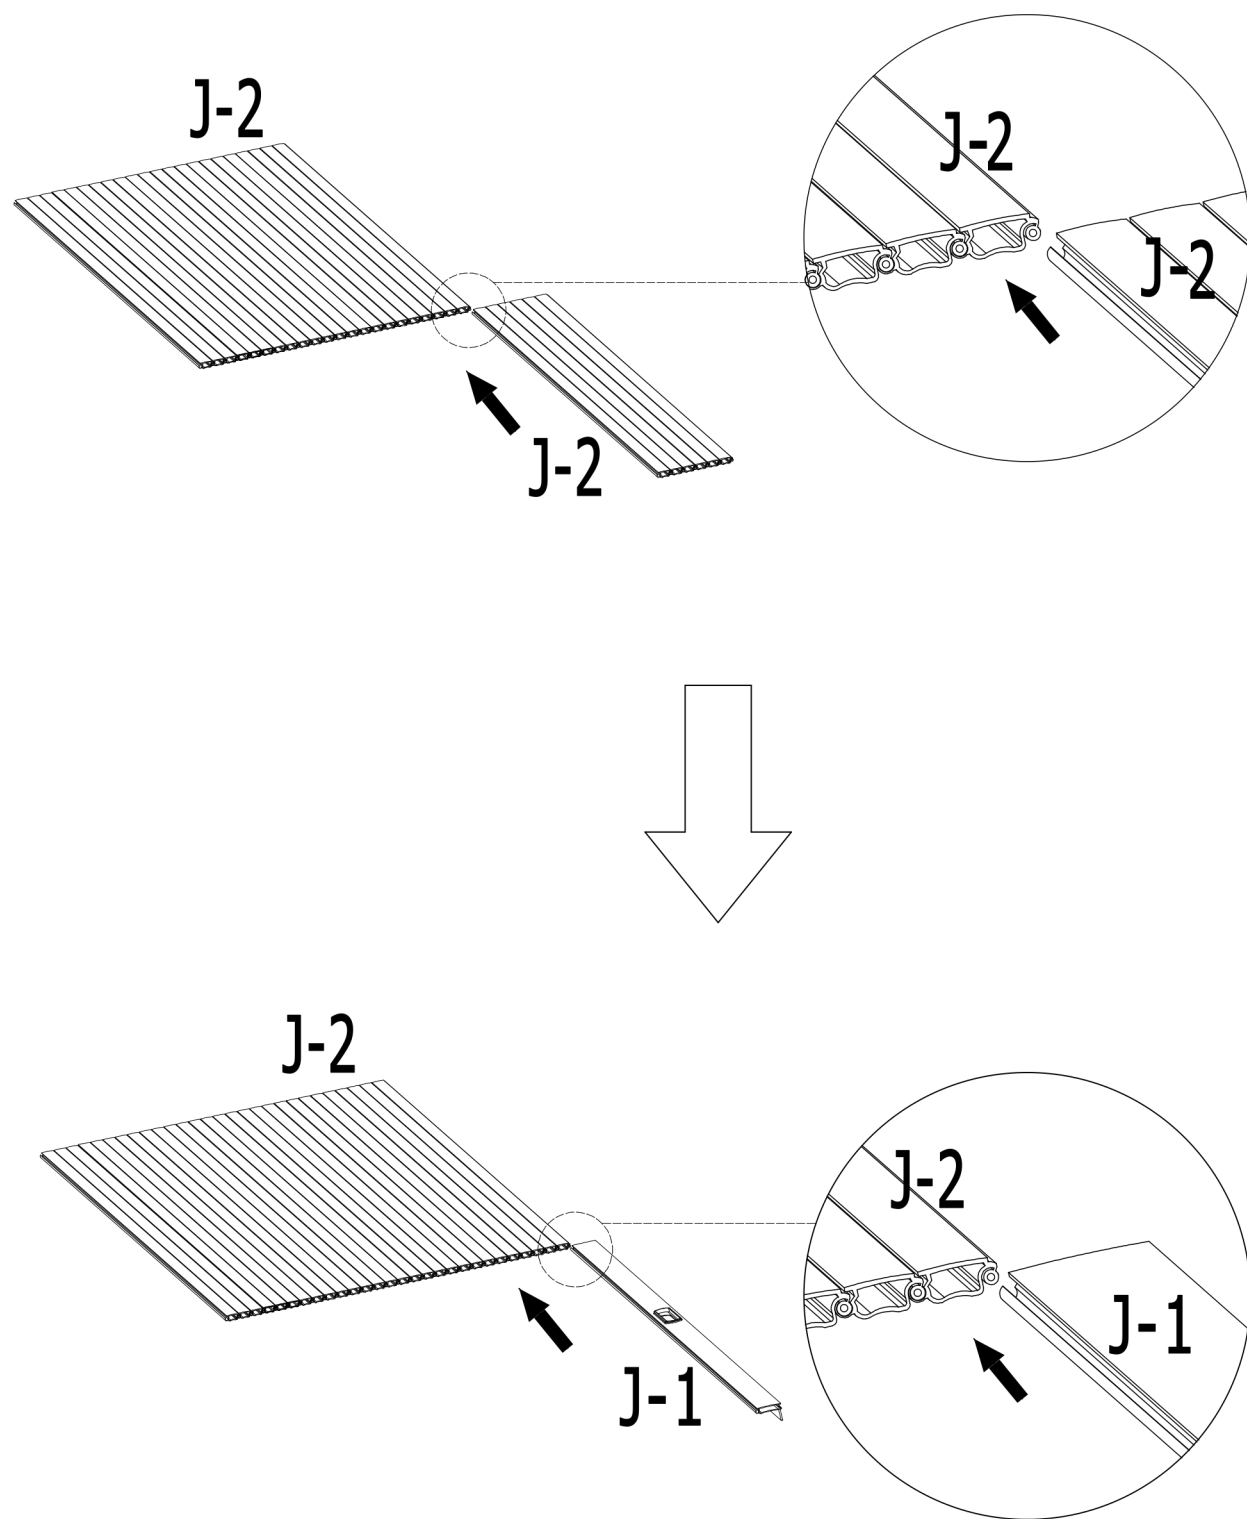 
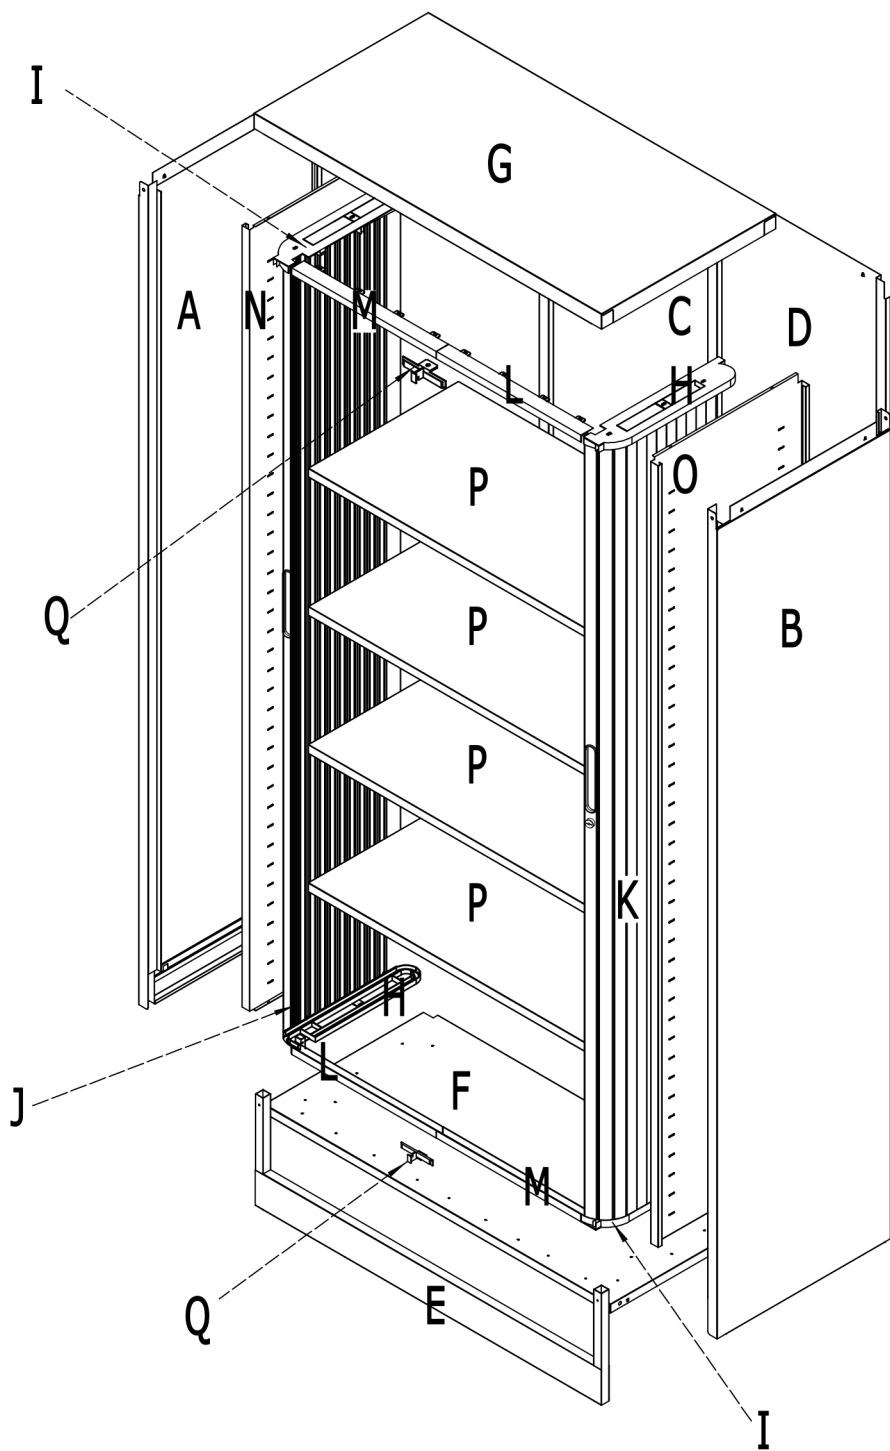 
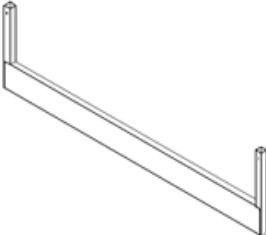 
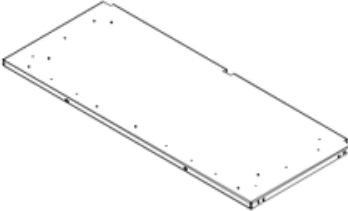 
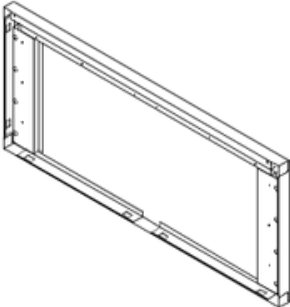 
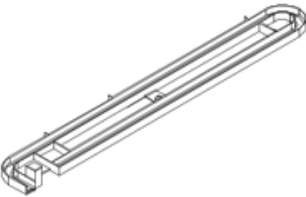 
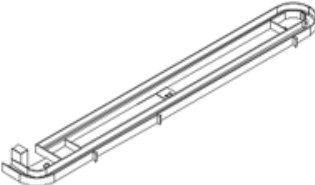 
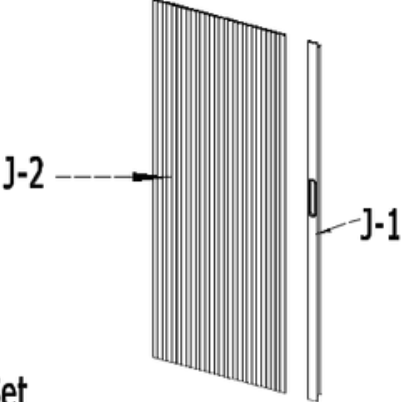 
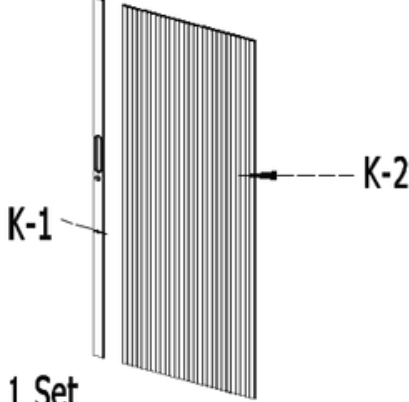 
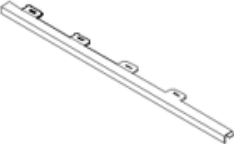 
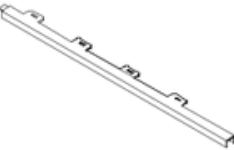 
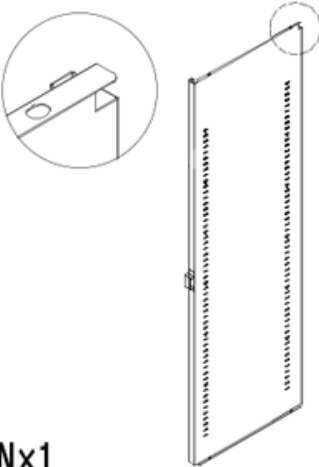 
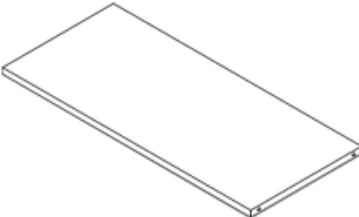 
 






#26 ROLO MAXI FLAT





SK	Montážny návod
CZ	Montážní návod
HU	Szerelési útmutató
PL	Instrukcja montażu
DE	Montageanleitung
ENG	Assembly Instructions
RO	Instrucțiuni de montaj
SL	Navodila za montažo
HR	Upute za montažu
SR	Uputstvo za montažu
BG	Инструкция за монтаж
EL	Οδηγίες συναρμολόγησης
IT	Istruzioni di montaggio
ES	Instrucciones de montaje
PT	Instruções de montagem
FR	Notice de montage
NL	Montagehandleiding
DA	Monteringsvejledning
NO	Monteringsanvisning
SV	Monteringsanvisning
FI	Kokoamisohje
ET	Paigaldusjuhend
LV	Montāžas instrukcija
LT	Montavimo instrukcija
UK	Інструкція з монтажу
RU	Инструкция по сборке

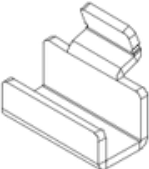

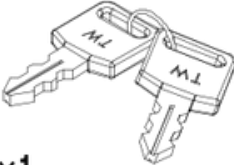

         Ax1	 Bx1	 Cx1	 Dx1	 Ex1	 Fx1
 Gx1	 Hx2	 Ix2	 Jx 1 Set		 Kx 1 Set
 Lx2	 Mx2	 Nx1		 Px4	 Qx2
 ax51	 bx16	 cx16	 dx1		

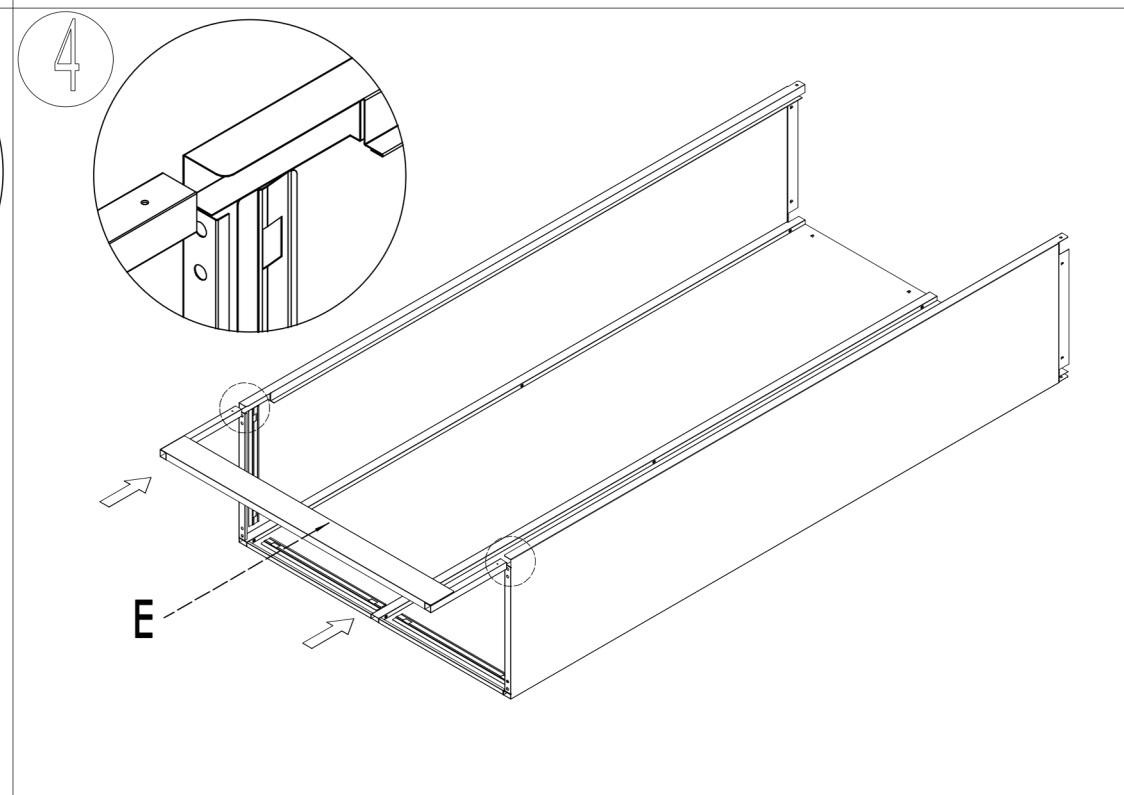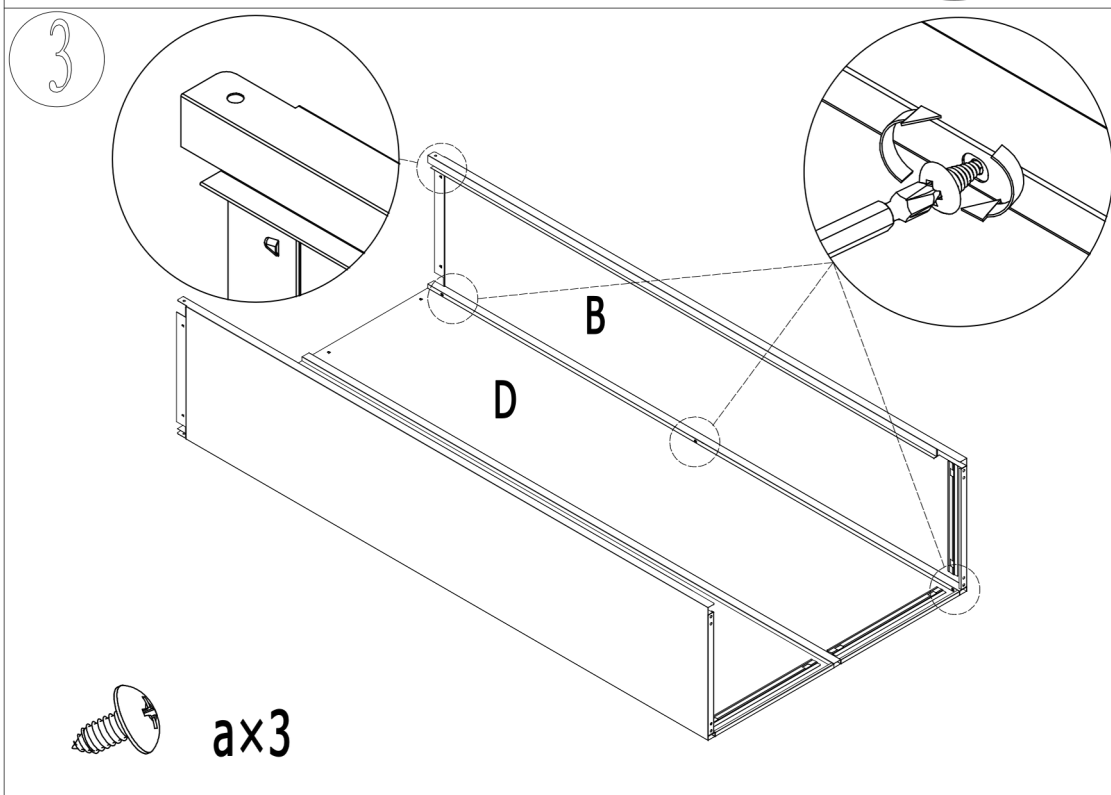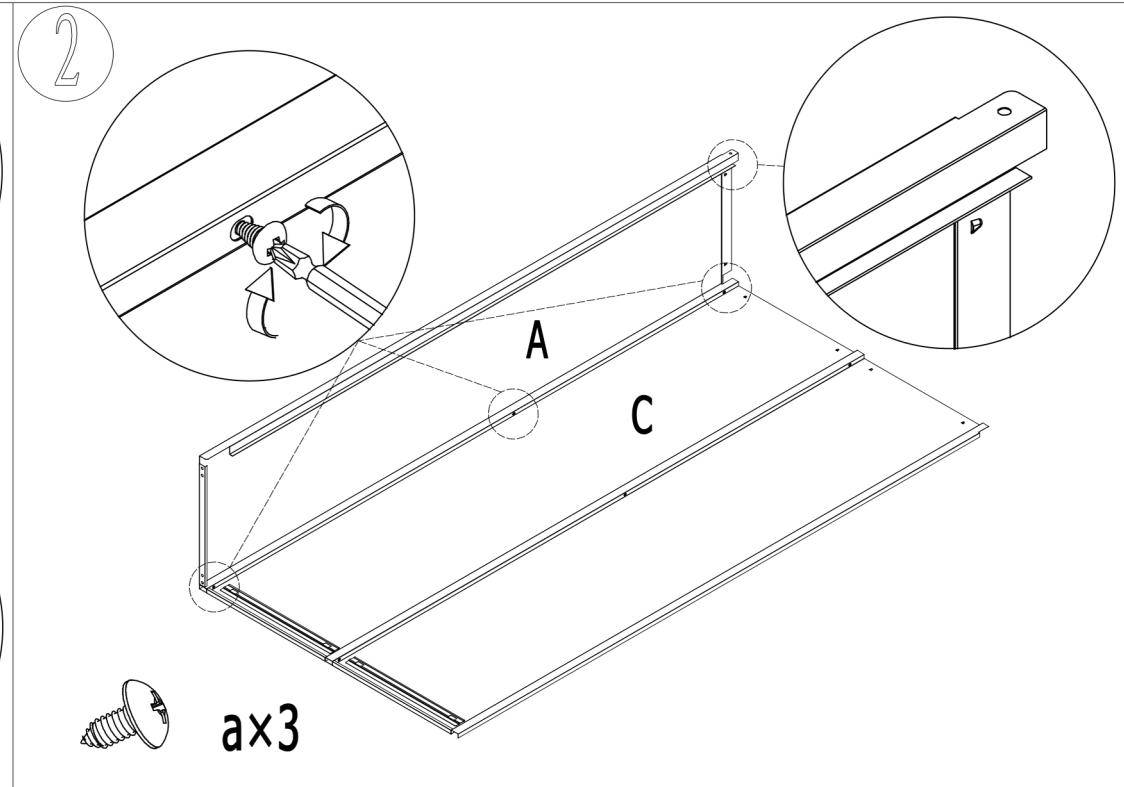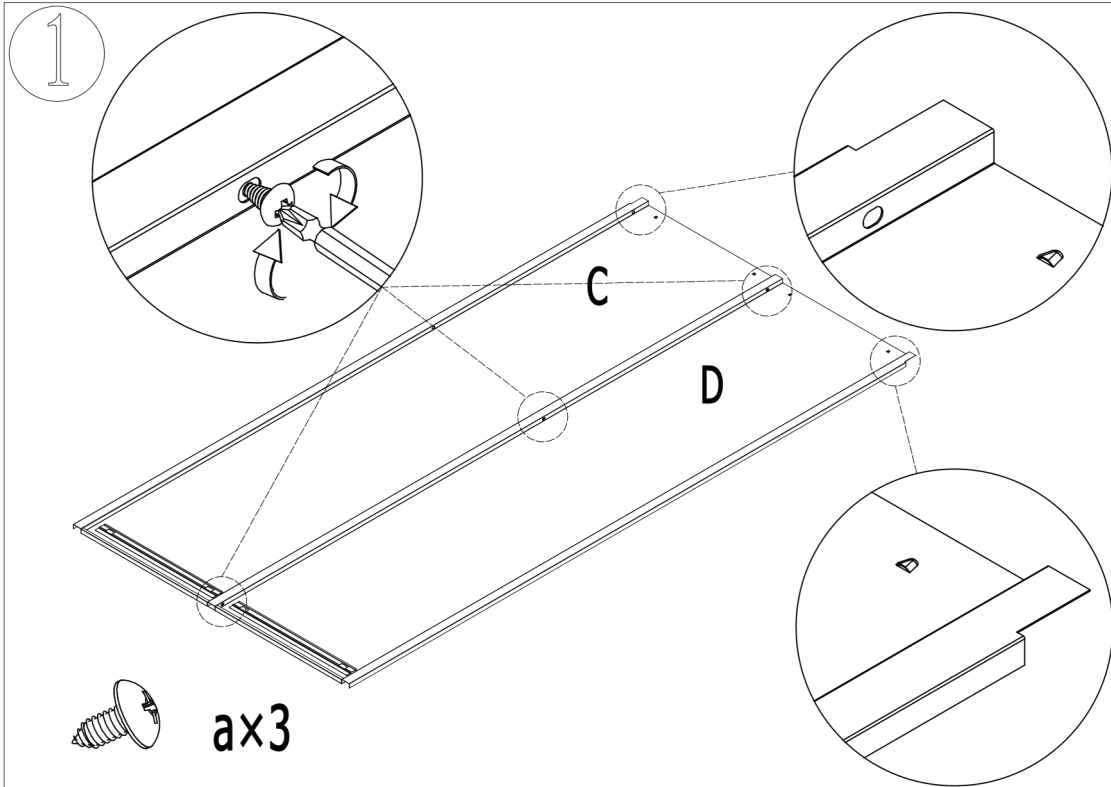

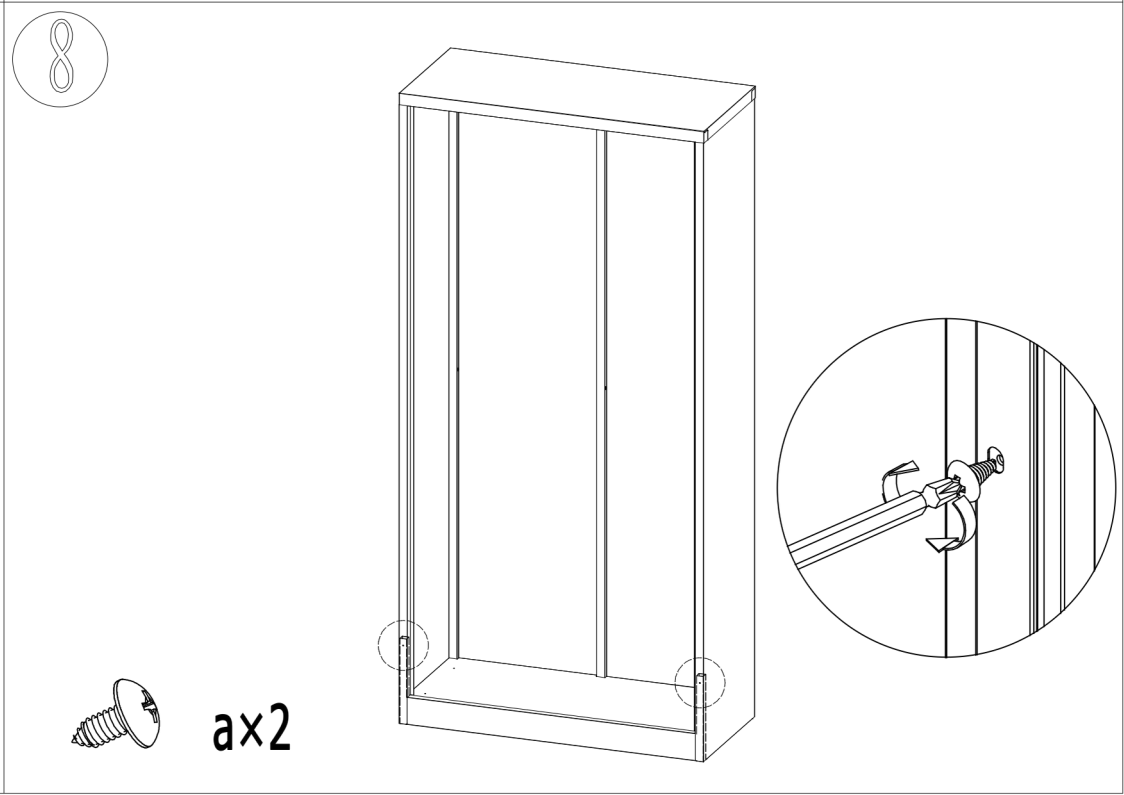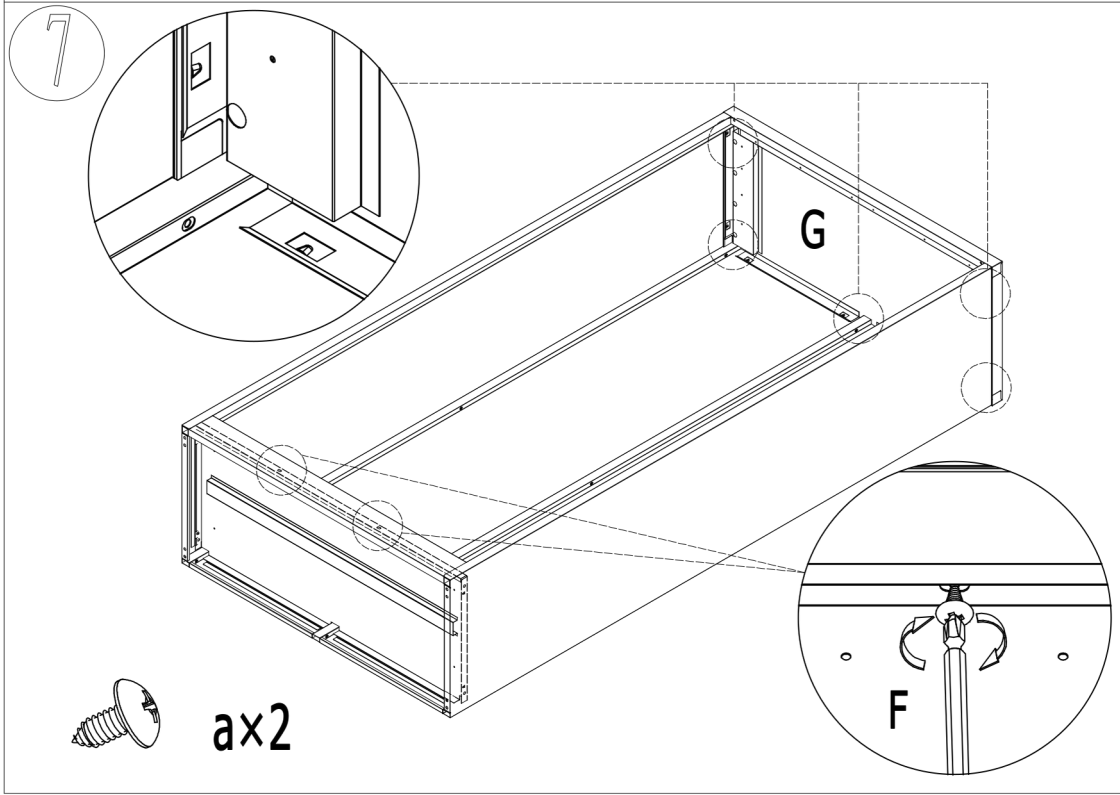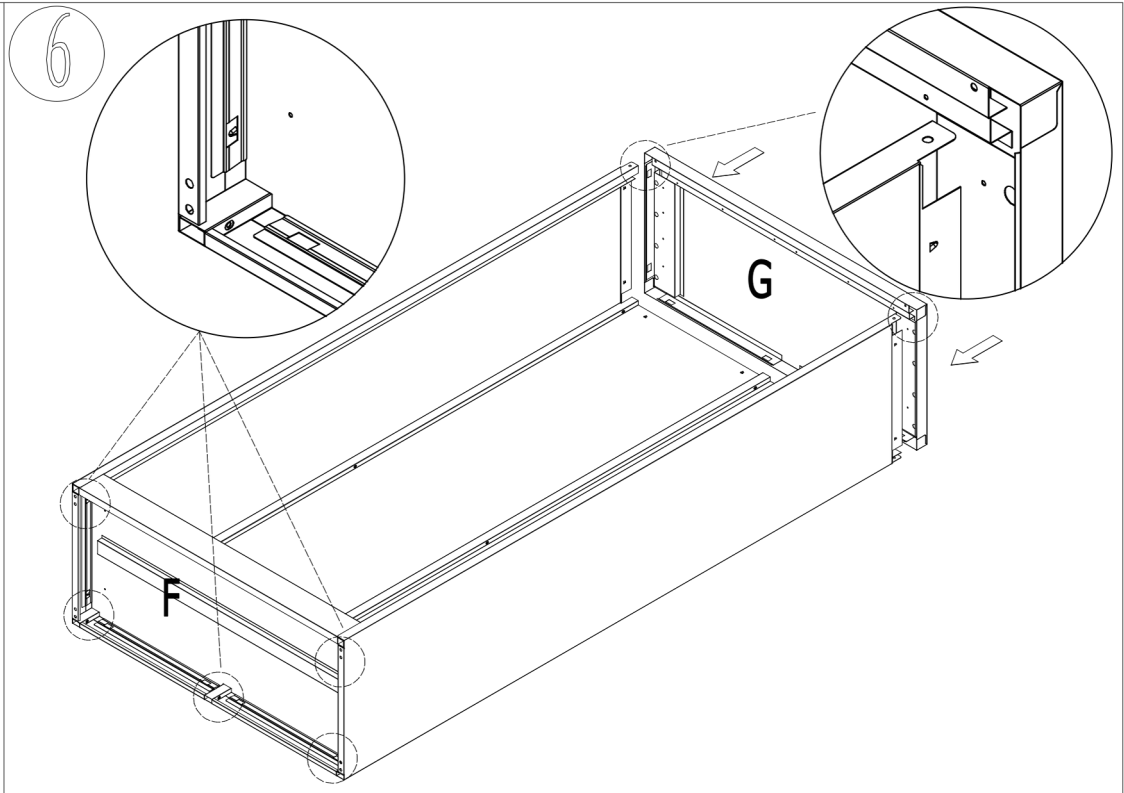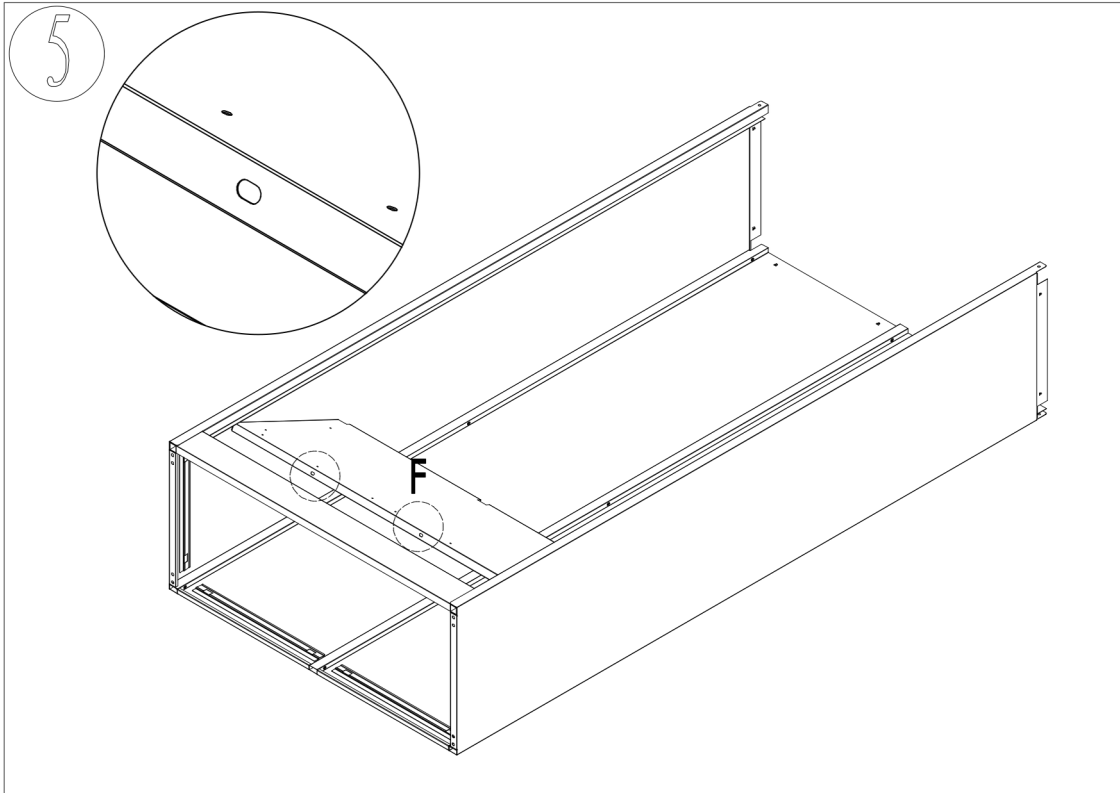




9



a x 6

H

   I

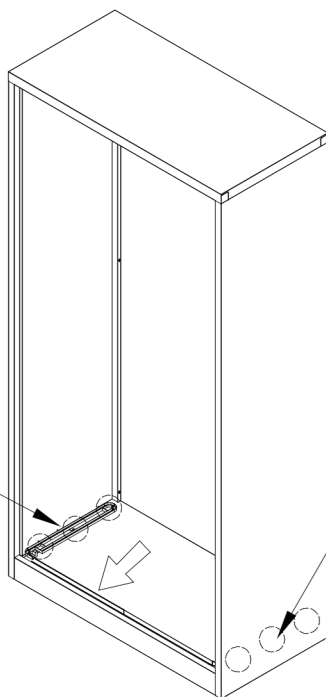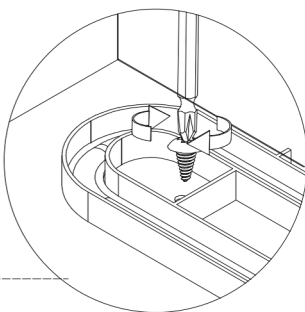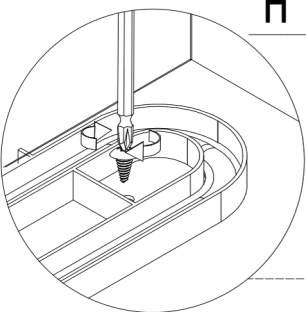




10




a x 6

I

  
 
H

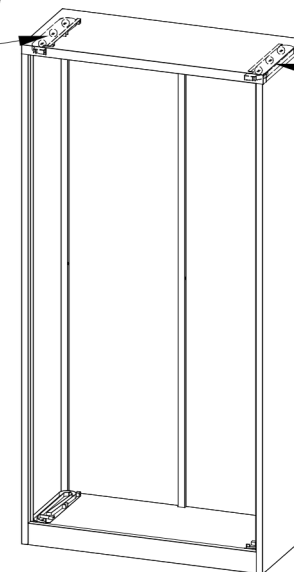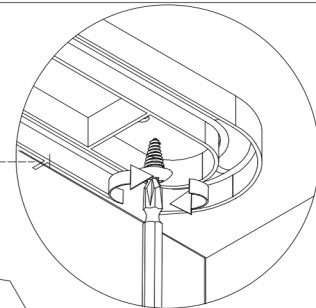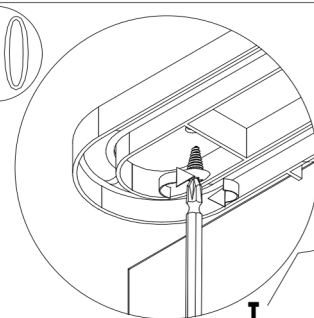


11

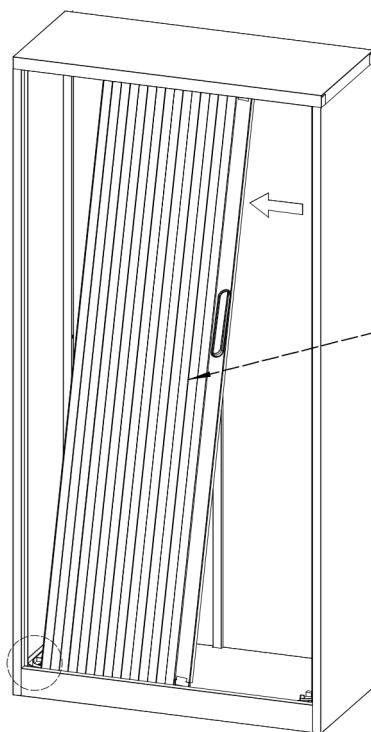 



J

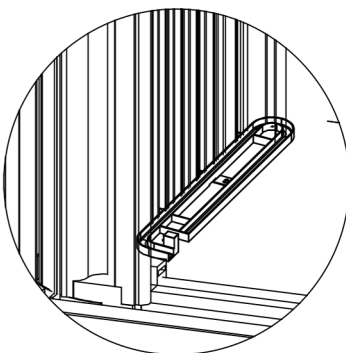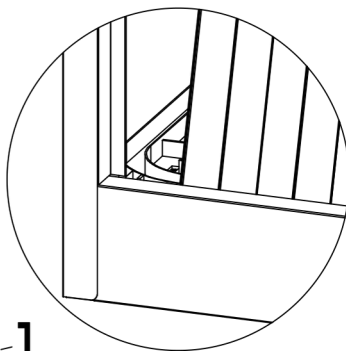  


12

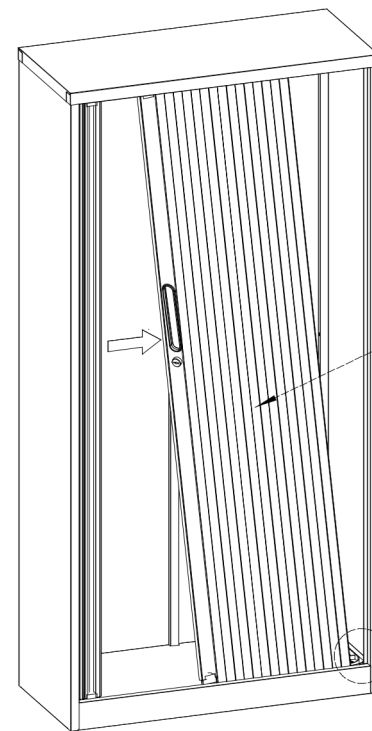 


K

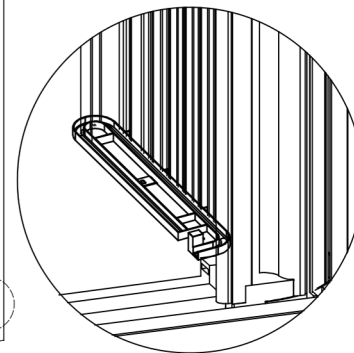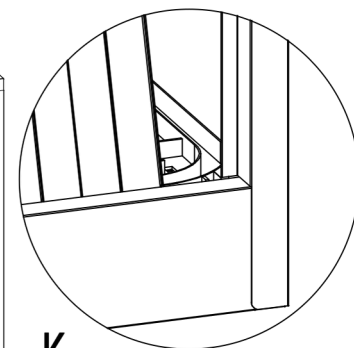  


13

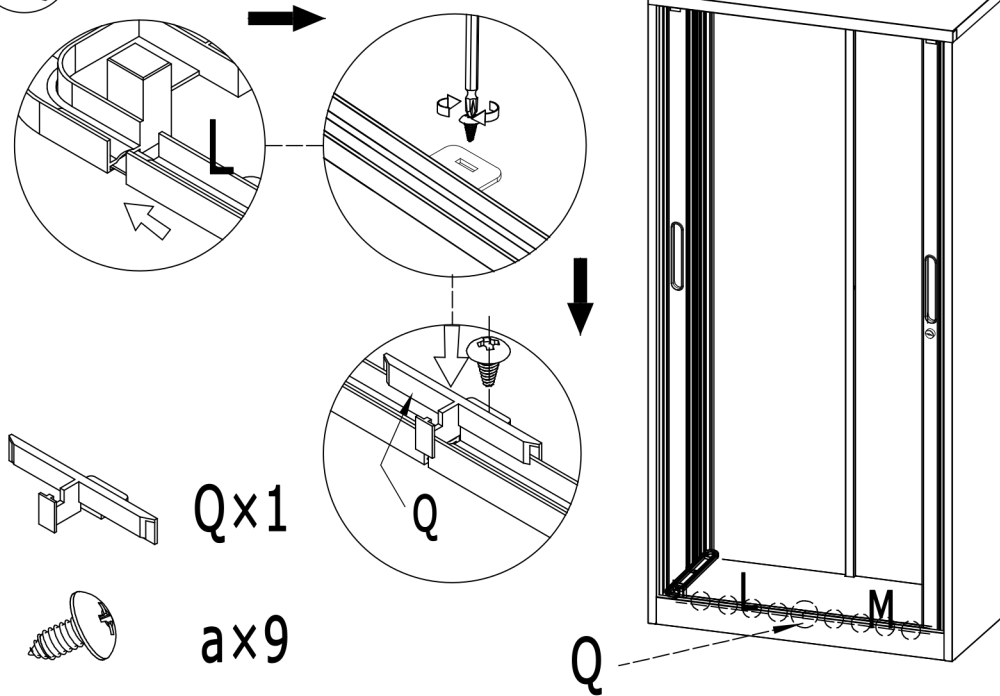 


14

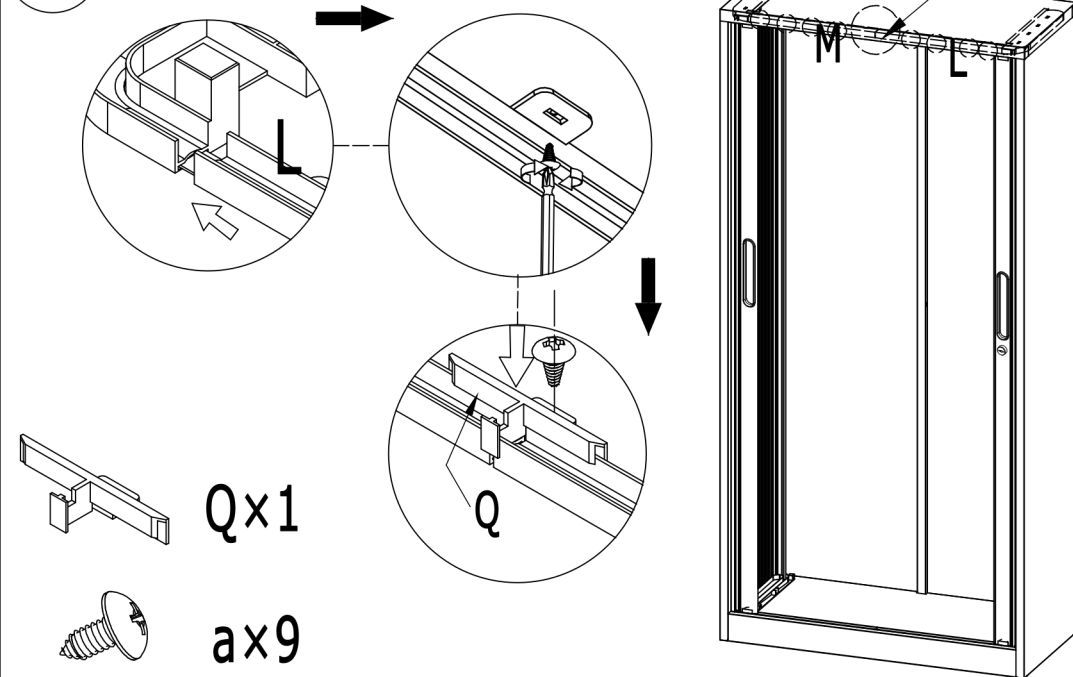 


15

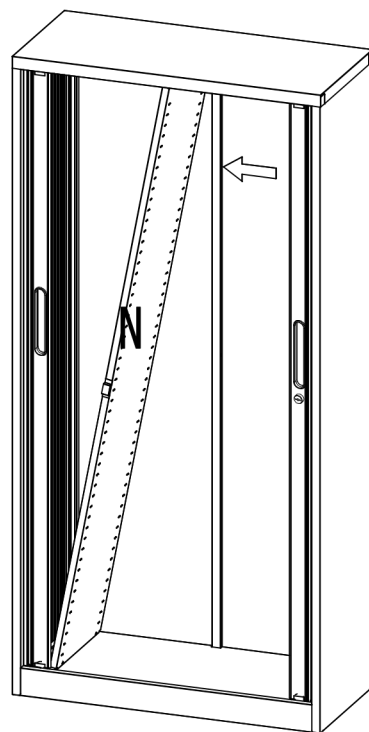 


16

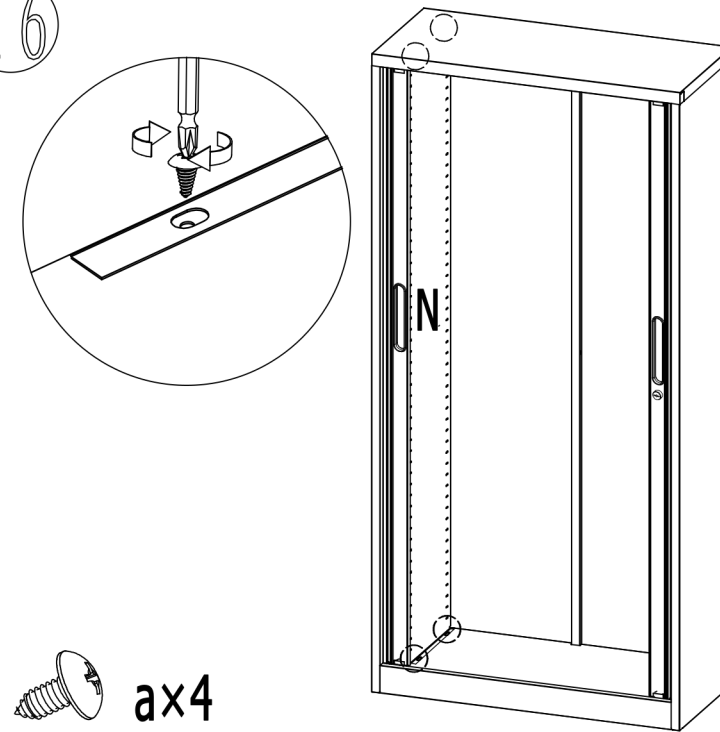 

17

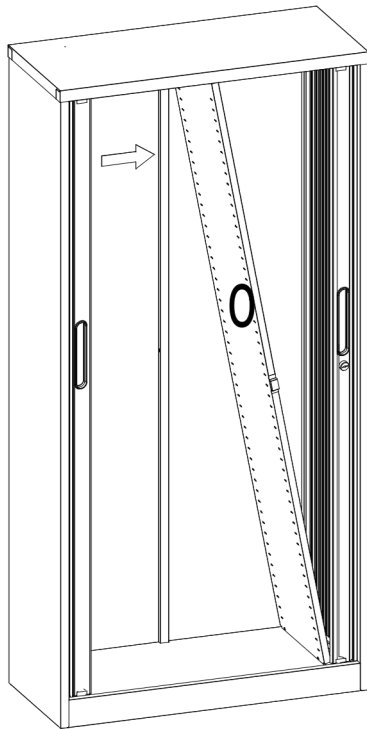 


18

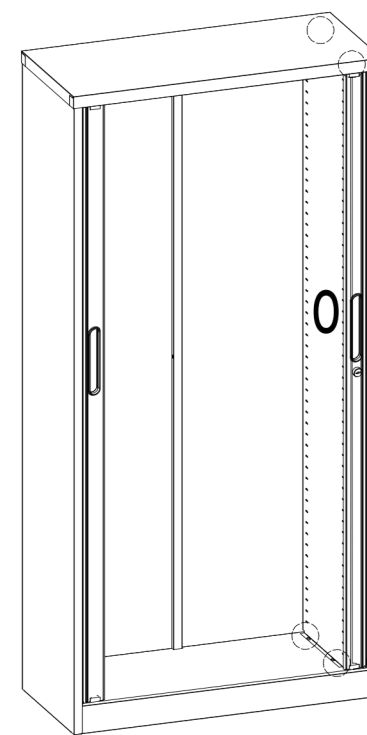 

a x 4

 19

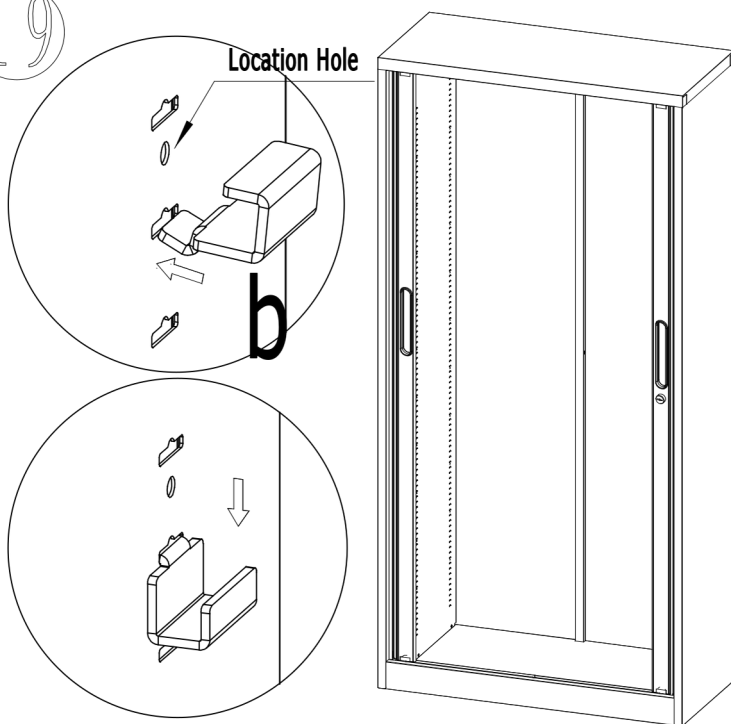

20

